

# INSTRUCTIONS

## #11-543 Paver/Wall Splitter

#11-543 Paver/Wall Splitter is designed to split man made pavers and retaining wall units.

### TO OPERATE:

To split paver or retaining wall units, open handle to full position. Remove blade adjustment pin and raise top blade to height of material to be cut. Insert adjustment pin in next available hole along adjustment shaft.



Correct handle position



Incorrect handle position

If the handle is adjusted to a position greater than 45°, the proper leverage will not be created. Press down on handle to split unit. For harder materials, it may be necessary to repeat this process. To create next cut, open handle to full open position. Turn crank handle in counter clockwise motion to raise blade. Repeat process.

Place material to be cut in the center of the base. Lower tip blade by turning crank handle clockwise and lower handle until it rests at a 45° angle to base.



To transport unit, open handle to full open position. Insert support pin through holes at the end of the handle to lock handle in open position.

### Specifications for 11-543 Paver Splitter

Technical Data	11-543-C5
Cutting Length	16"
Cutting Depth	1"-12"
Length	32"
Width	16 1/8"
Height	35 1/2"
Weight	124 lbs.
Replacement Blade	11-406-B5

# Bon®

4430 Gibsonia Rd. • Gibsonia, PA 15044 • USA • 800-444-7060 • www.bontool.com